

IRIDIUM SATELLITE PHONE INSTRUCTIONS

PHONE #: 881-6____ - ____ - ____

DIALING OUT: When you have a signal 001 - AREA CODE-***-**** SEND

**In order to dial out you must dial 001-before every number !!

TEXTING OUT

MENU: Select Messages—Create message—Type message(Then Options—Send)—New Recipient(ADD)

Select(Enter Number)—Enter # (OK)—Select SEND

***Although this is an option—Verifying if the text went through, it's better to call

POSTING A TEXT TO THE RIVER PHONE FROM A HOME COMPUTER

HOME COMPUTER: Go to iridium.com—Send a satellite message—Type 160 characters-Send

CHECKING YOUR TEXT FOR FREE FROM RIVER VIA HANDSHAKE

001-480-752-5105

Also, if you make any call out you are essentially handshaking(downloading any information awaiting your phone)

Iridium satellites orbit the earth around the North and South Pole in a low earth orbit. They have the most satellites and most efficient system available on the market. If you want to maximize your potential simply place yourself with vision of the most sky available. One need not climb up to increase your potential. Better to have patience for the next satellite.